

FIG. 3

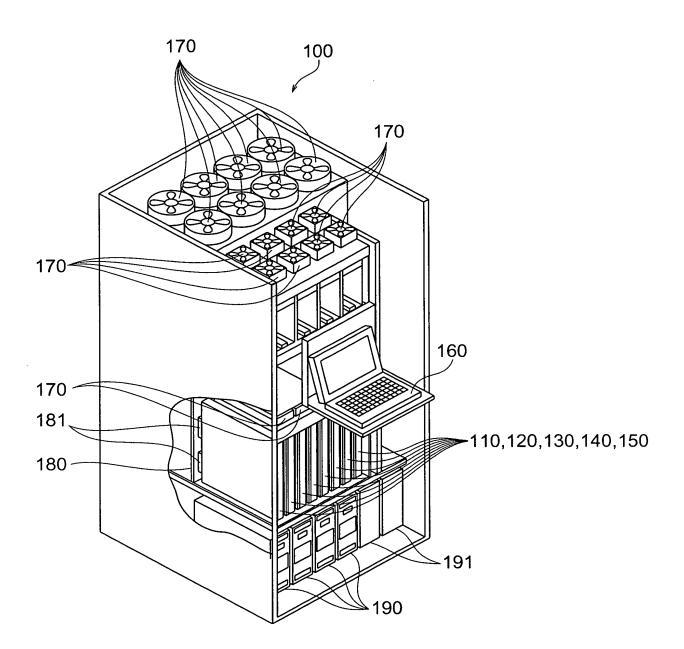


FIG. 4



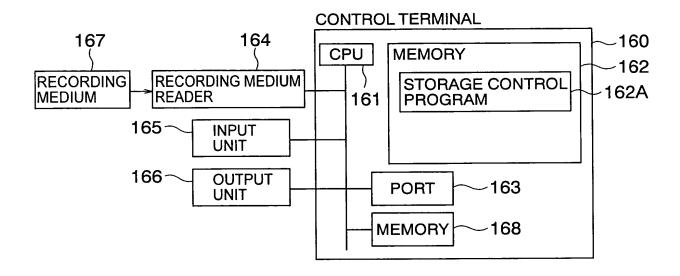



FIG. 5

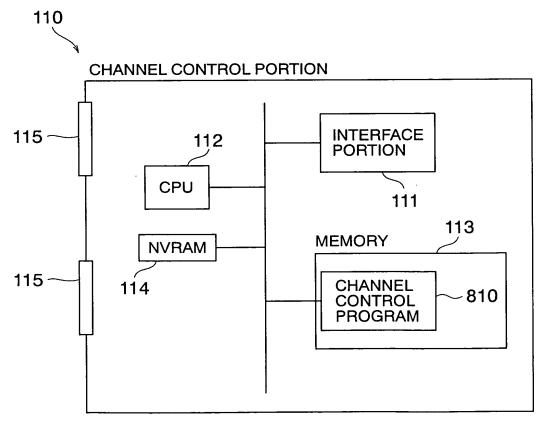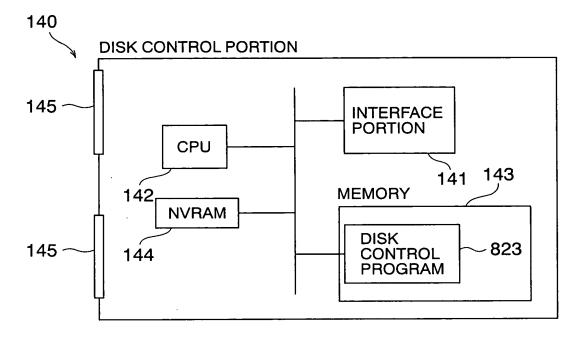



MIURA Page 5 of 15 ASAM.0117

FIG. 6



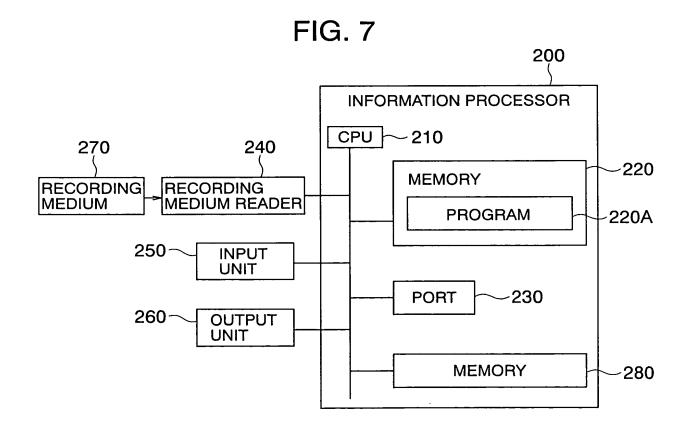

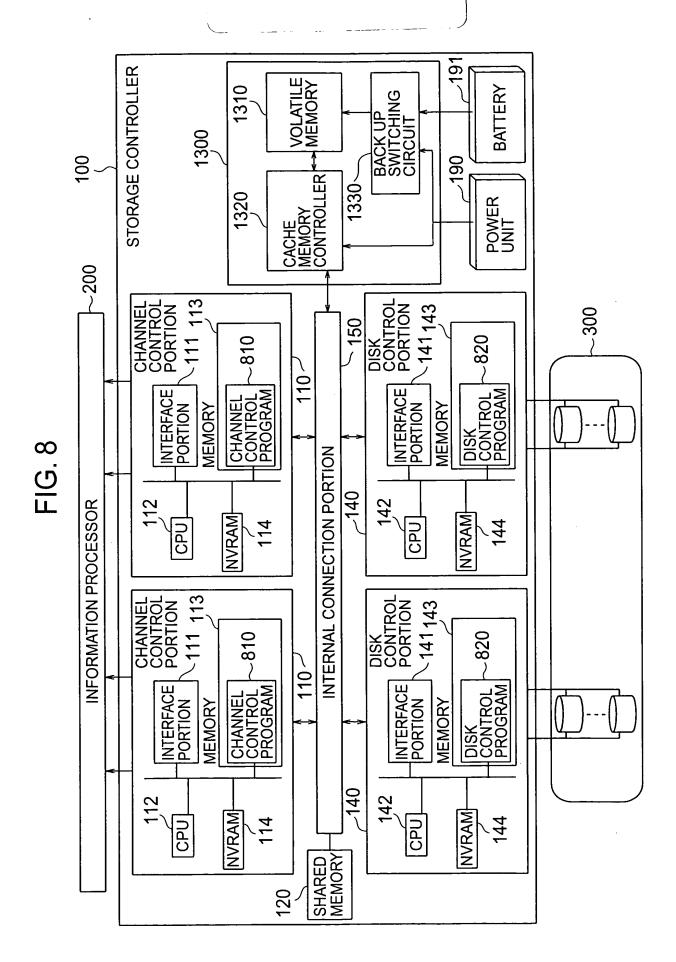

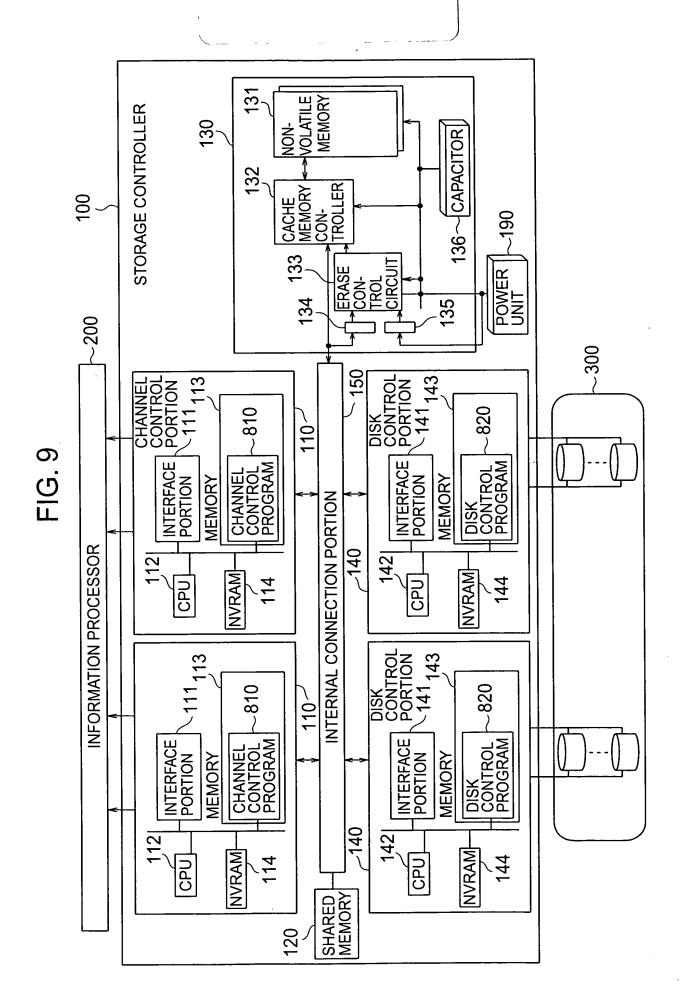

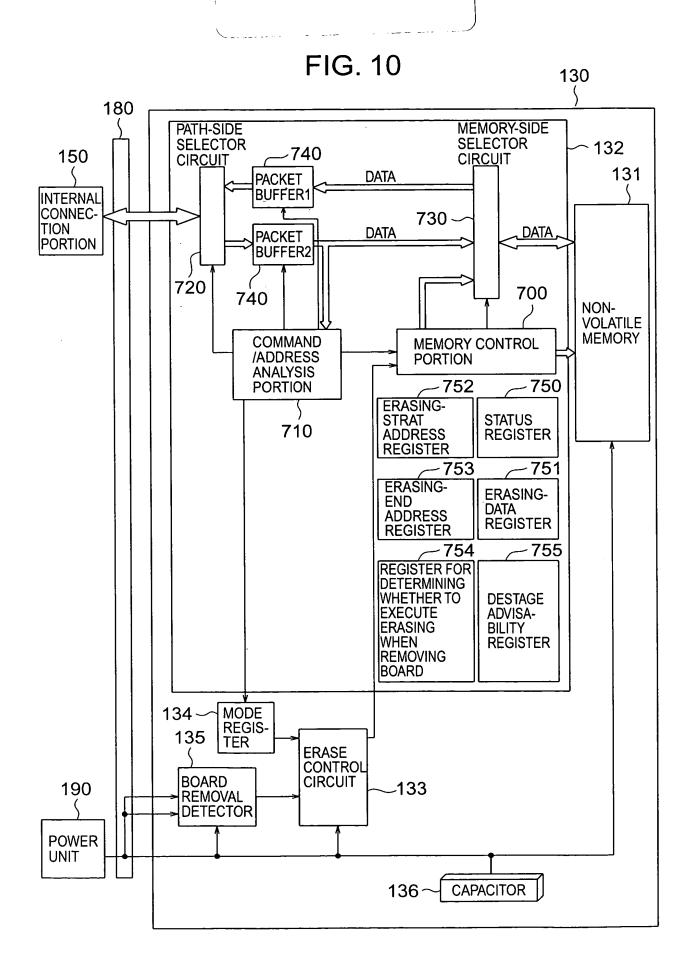


FIG. 11

CACHE MEMORY DATA ERASING/SETTING SCREEN	\times
SELECT CACHE MEMORY BOARD.	
PRESENT CACHE MEMORY CONFIGURATION	
CACHE MEMORY BOARD 1 🛕	
CACHE MEMORY BOARD 2	
CACHE MEMORY BOARD 3	
CACHE MEMORY BOARD 4 DETAILS SETTING	
SCREEN	
DATA ERASING INTERRUPT CANCE	

FIG. 12

DETAILS SETTING SCREEN	
ERASE-DATA PATTERN DESIGNATION	FF 00 AA 55 TIME
ERASE RANGE DESIGNATION AUTOMATIC DATA ERASING WHEN REMOVING CACHE	 ✓ WHOLE RANGE ☐ RANGE DESIGNATION ✓ ON ☐ O7FF
MEMORY BOARD	☐ OFF
DESTAGE	☑ TO BE PERFORMED ☐ NOT TO BE PERFORMED
	OK cancel

MIURA Page 10 of 15 ASAM.0117

FIG. 13

STATUS DISPLAY SCREEN	
	!
DATA ERASING IS COMPLETED.	

MIURA Page 11 of 15 ASAM.0117

FIG. 14

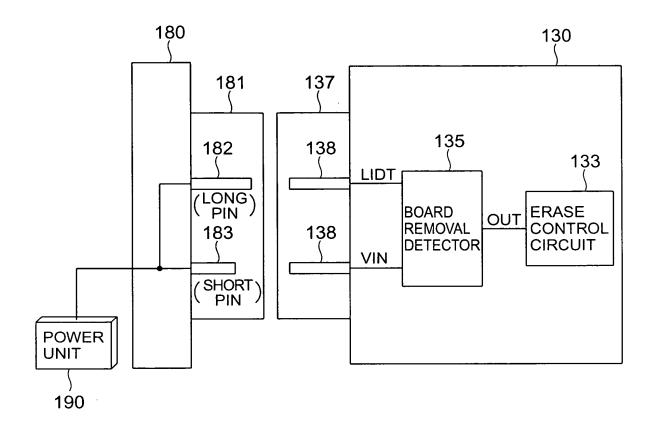
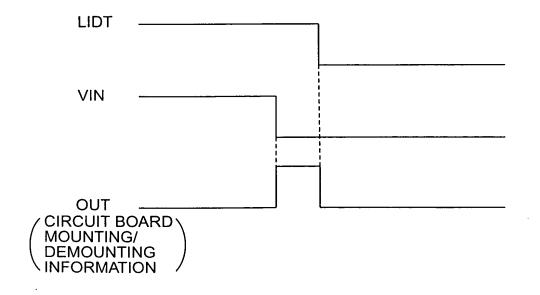
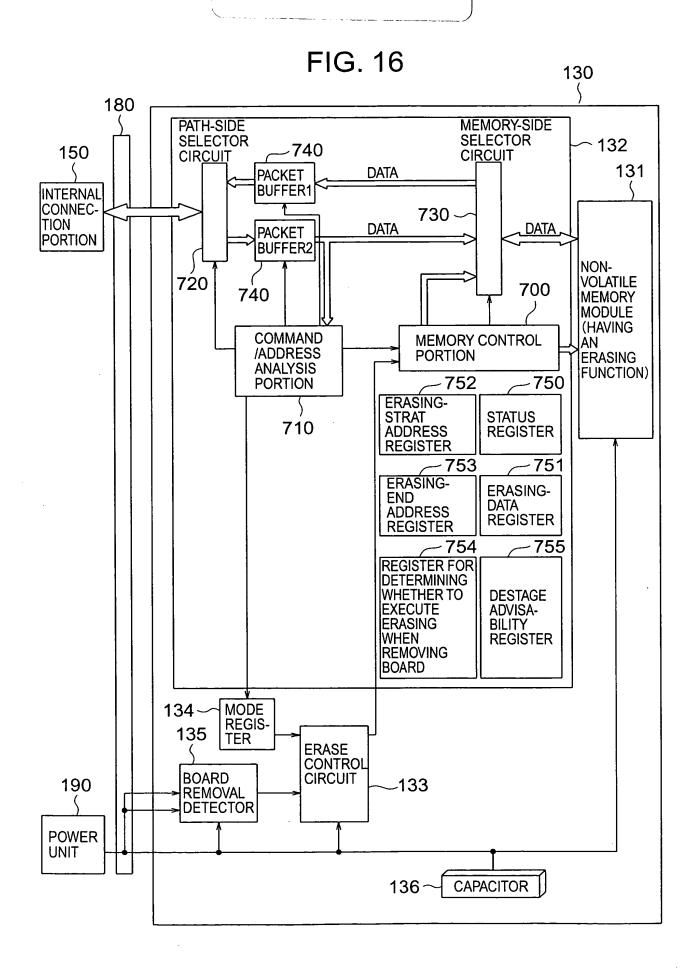


FIG. 15





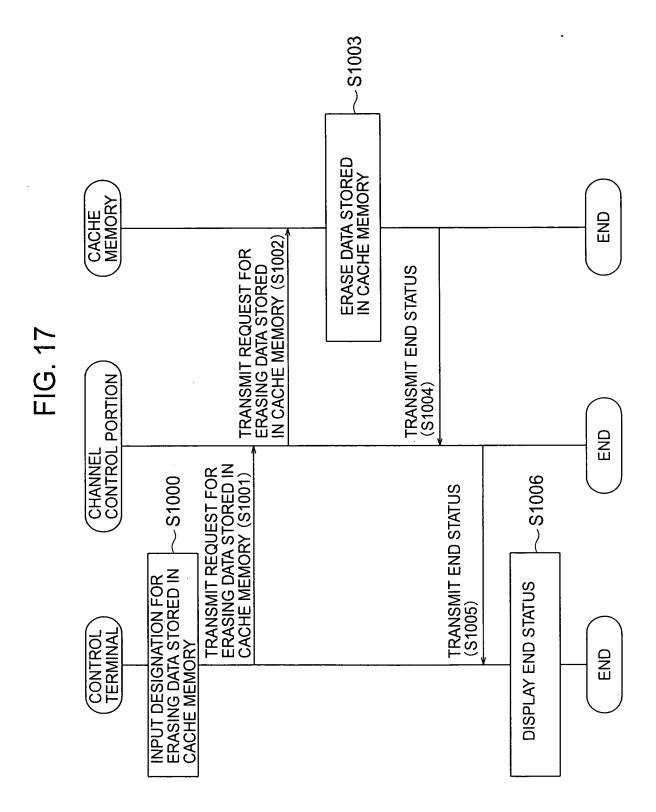


FIG. 18

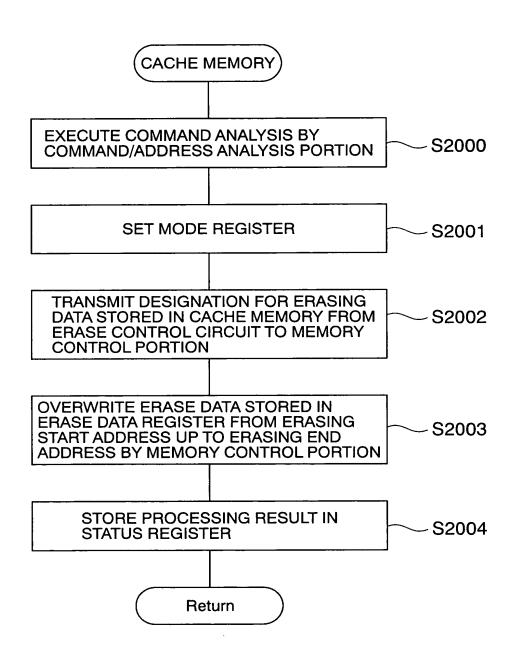


FIG. 19

